

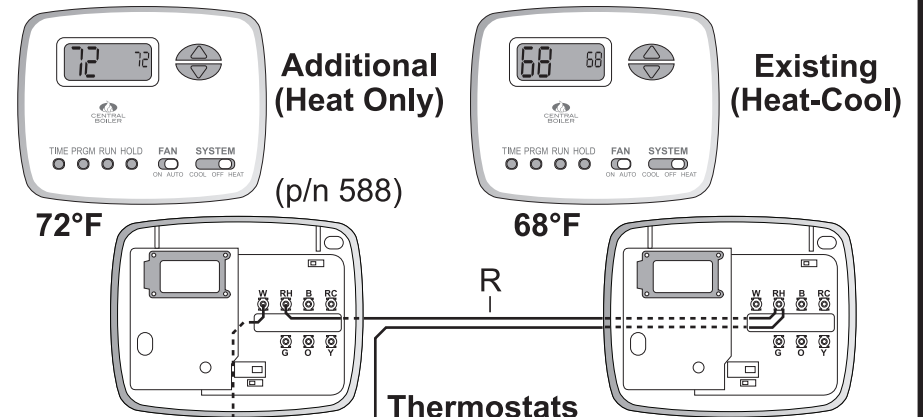


# Wiring Diagram Using a Zone Valve Wired Directly into the Control Box of the Furnace

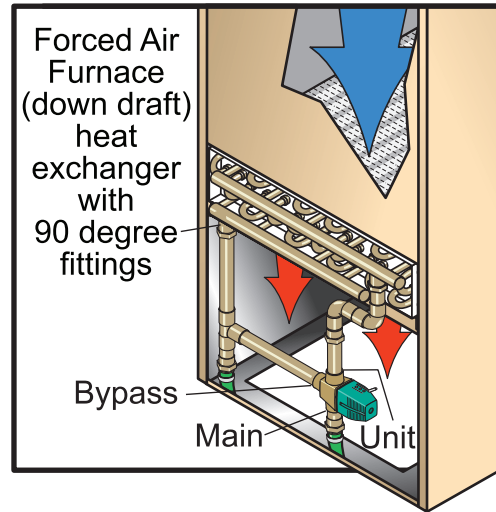

**NOTE**  
End switch connects terminal 2 and terminal 3 when Zone Valve is open.

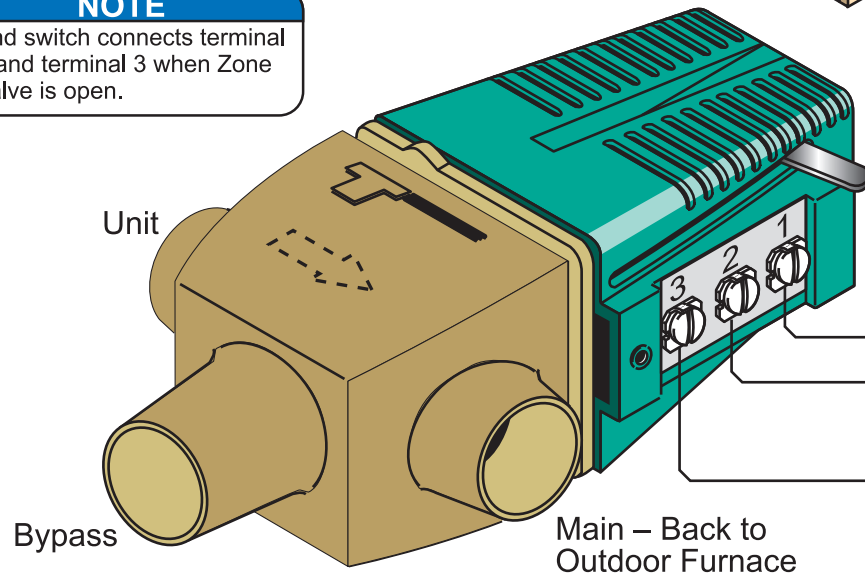

**Zone Valve**

**NOTE**  
Thermostats must be installed by qualified technician.



For illustration purposes only:  
• Existing thermostat style may vary.  
• Location of thermostat may vary.