
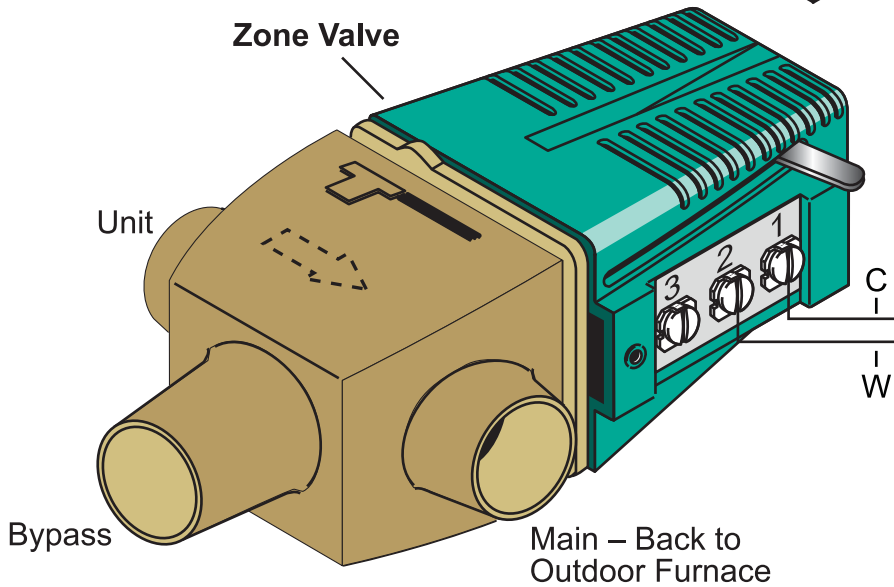
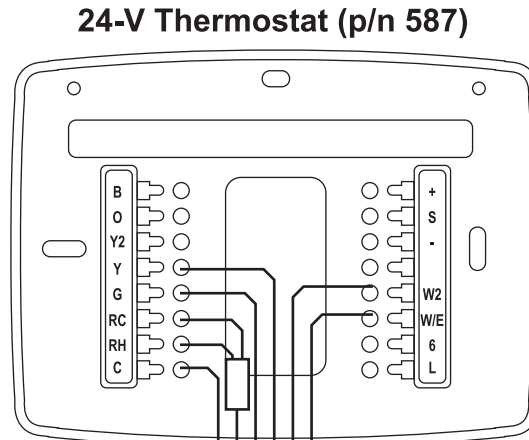


Outdoor Furnace and Forced Air Wiring Configuration

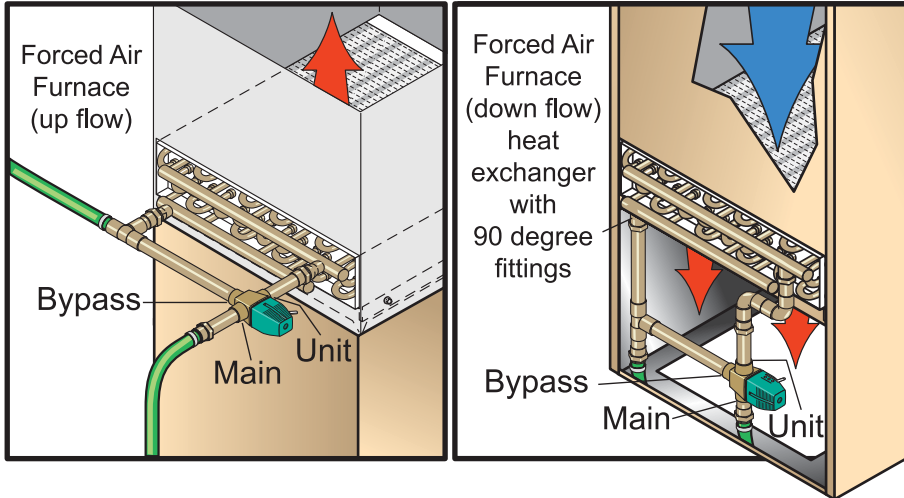

Y
G
R
C

W2
-W

NOTE
Change Installer Setup menu:
ITEM 2. to ELE to force thermostat to turn blower on.

Furnace or Fan Center



For illustration purposes only:
• Location of thermostat may vary.
• Not for heat pump application.

NOTE
Thermostats must be installed by qualified technician.

