



Three Stage with Heat Pump

Stage One (Outdoor Furnace), Stage Two (Heat Pump) and Stage Three (LP Gas, Natural Gas, Oil or Electric Furnace)

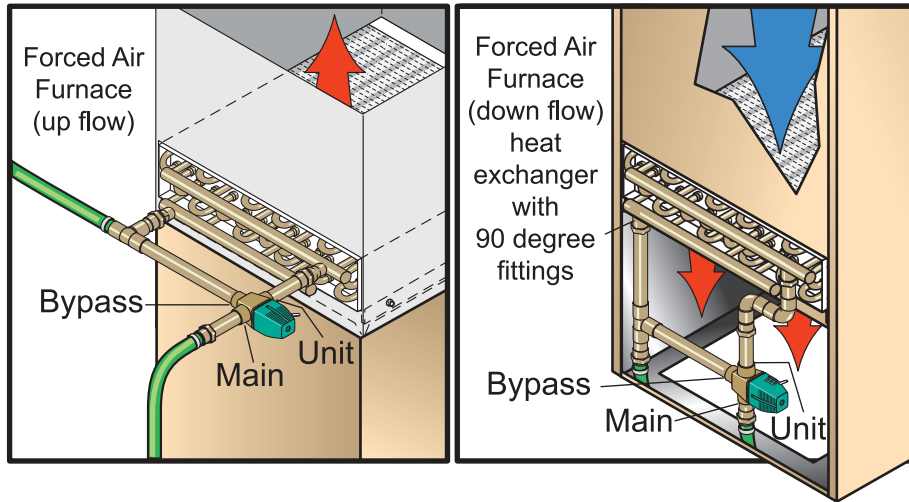

24-V Thermostat (p/n 587)

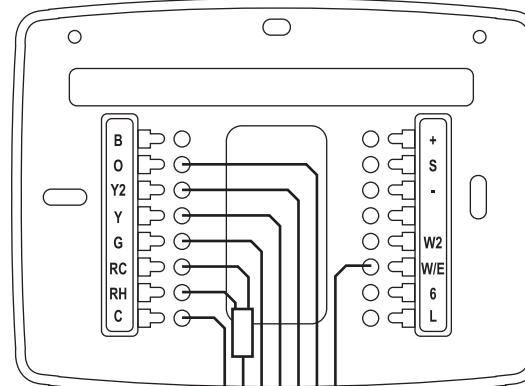



NOTE

See thermostat manual for setup changes. The following items must be changed:
MENU 1. HP2 - Allows 3 stage operation.
MENU 2. ELE - Thermostat turns fan ON during call for heat.

NOTE

Thermostats must be installed by qualified technician.

Field Supplied DPDT Winter/Summer Switch

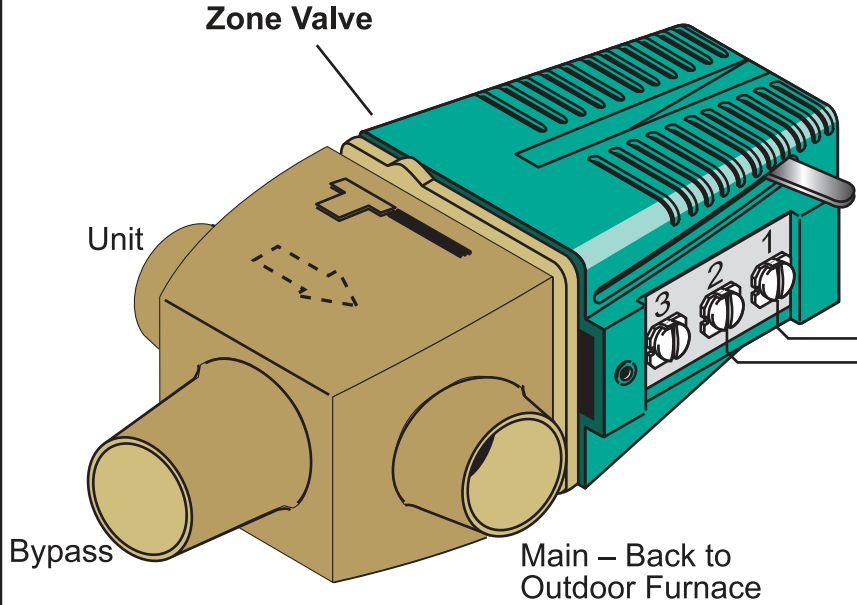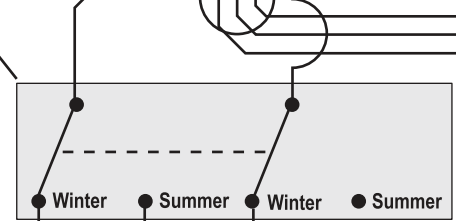

NOTE
 This wiring assumes "O" terminal is energized during cooling mode.

For illustration purposes only:
 • Location of thermostat may vary.



Furnace Terminal Block

